4. Dongle license and d-List Config

d-LISTconfig Operation	 Limited access for d-List Config software. Only read functions and the following write functions are possible: Reset Set date & time View maximum and maximum difference temperatures LED Test Switching sensors off and on
d-LISTconfig Maintenance	Additional to Operation level: - Save configuration - Clear lists (events & both max. temperatures) - Relay test - Adjust alarm thresholds - Simulation (alarm and fault)
d-LISTconfig Commissioning	Aditional to Maintenance level (Full Access): - Configure - Save configuration, edit offline, load into SCU 835

Dongle order form available on the Securiton Homepage:

http://www.securiton.com

STconfig 62-3201002-01-0	1
	STconfig 62-3201002-01-0

d-List Dongle license			
d-LISTconfig Operation	d-LISTconfig Opera	VE100430	
d-LISTconfig Maintenance	d-LISTconfig Maint	VE100431	
d-LISTconfig Commissioning	d-LISTconfig Commi	VE100432	

Securiton Dongles		
Dongle for Securiton Applications (without license)	ULM-DP	VE100450
Dongle for Securiton Applications (without license) Pack of 5 Dongles	ULM-DP 5	VE100451
Dongle for Securiton Applications (without license) Pack of 10 Dongles	ULM-DP 10	VE100452